



INSTRUCTION SHEET FOR TOOL No.2232

STEERING HEAD BEARING RACE REMOVAL TOOL
 USE TO INSTALL AND REPLACE BEARING RACE IN STEERING HEAD.
 USE ON BIG TWIN 1949-PRESENT
 USE ON SPORTSTER 1982-PRESENT



1. Refer to H.D.® Service Manual for specifications.
 Use with JIMS® tool handle #33416-80 and driver spacer #2388. Use a press fit lube, like JIMS® #2124.

CAUTION: WEAR SAFETY GLASSES. EXCESSIVE FORCE MAY DAMAGE THE PARTS !
 SEE JIMS® CATALOG FOR OVER 100 OTHER TOP QUALITY PROFESSIONAL TOOLS.
 THE LAST TOOLS YOU WILL EVER NEED TO BUY.

"FROM THE TRACK... TO THE STREET!"

555 DAWSON DRIVE, CAMARILLO, CA 93012 • PHONE 805-482-6913 • FAX 805-482-7422



INSTRUCTION SHEET FOR TOOL No.2232

STEERING HEAD BEARING RACE REMOVAL TOOL
 USE TO INSTALL AND REPLACE BEARING RACE IN STEERING HEAD.
 USE ON BIG TWIN 1949-PRESENT
 USE ON SPORTSTER 1982-PRESENT



1. Refer to H.D.® Service Manual for specifications.
 Use with JIMS® tool handle #33416-80 and driver spacer #2388. Use a press fit lube, like JIMS® #2124.

CAUTION: WEAR SAFETY GLASSES. EXCESSIVE FORCE MAY DAMAGE THE PARTS !
 SEE JIMS® CATALOG FOR OVER 100 OTHER TOP QUALITY PROFESSIONAL TOOLS.
 THE LAST TOOLS YOU WILL EVER NEED TO BUY.

"FROM THE TRACK... TO THE STREET!"

555 DAWSON DRIVE, CAMARILLO, CA 93012 • PHONE 805-482-6913 • FAX 805-482-7422